



SECURITY SAFE

ISO 9001:2015

VDH SAFES SAIGON COMPANY LIMITED

Manufacturing and Providing Warranty, Maintenance,
Repairing Service of Safes, Strong Door



Office & Factory:

Lot 5, Road 5, Linh Trung II EPZ

Thu Duc Dist, HCMC

Tel: (84.28) 37291875 – 76

Fax: (84.28) 37291874

E-mail: info@vdhsafes.com

www.vdhsafes.com

Head Office:

Bedrijfsterrein "Ziedewij" 1,

2991 LA Barendrecht, Holland

Tel: +31 (0) 180-61 29 88

Fax: +31 (0) 180-62 01 58

E-mail: info@vdhsafes.nl

www.vdhsafes.nl

HOW TO USE THE ELECTRONIC LOCK (MT – 2003)

I. How to open ?

The default number set at the factory is * , 1, 2, 3 , 4, 5, 6 and # in the order.

1. Press the * key first. (the red lamp turns on and it beeps)
2. Press the numbers 1, 2, 3 ,4, 5, 6 in the order.(It beeps with the red lamp on.)
3. Press the # key. (The green lamp turns on and the door opens)

II. How to close ?

Press the # key.

(When the lock does not open after the opening procedure, it beeps a few times repeatedly for 10 seconds)

III. How to set auto or manual mode (default setting is a manual mode) ?

Press the #, your password numbers, and the # key in the order (after green lamp is off)

1. For the manual mode (Pressing the number closes the door), press 7 and then # (the red lamp turns on and it beeps twice)
2. For auto mode (First the door closes in 20 seconds and then if keeps opening, automatically closes in 1 minute), press 9 and then # (the red lamp turns on and it beeps four times)

IV. How to change password?

- a. Press the * key, and current password, and the # key in the order (after the green lamp turns off)
- b. Press the 1 key three times respectively, and the # key (The green lamp turns on and it beeps twice)
- c. Press the new first and the # key in the order (while the green lamp is on)
- d. Repeat step " c "

V. Alert and Malfunction

1. If a wrong number is pressed, it beeps repeatedly and the red lamp turns on.
2. If the wrong number is pressed 3 times or more, all operations are stopped for three minutes (Press the correct number when it beeps after the lapse of 3 minutes and the lock operates properly)

VI. Battery replacement

Blinking red lamp when pressing the * key indicates that the battery is running low

Replace 1.5V (alkaline) batteries with new ones.

If safe doesn't use in 01 month, please take battery out.

After input password successful, please wait 02 seconds and then turn handle to open safes